

METAL MAJOR METAL MINOR INSTRUCTIONS

CARE OF YOUR HARMONICA

CAUTION

Before playing

Clean your hands and mouth.

Don't lift your chin when you play the harmonica.

You may accidentally swallow broken reeds.

Don't insert any foreign objects into the harmonica via holes.

This could cause damage.

Don't wipe your harmonica with thinner or benzine.

This could cause damage to the outer cover.

Don't swing your harmonica around.

You may hurt yourself or your friends.

Don't grip the cover too tightly.

You may bend the outer cover and damage the harmonica.

Keep your harmonica away from heat.

Don't leave your harmonica near a source of heat such as an oven, or under intense sunlight. This could cause damage to the harmonica.

After playing

Shake your harmonica to release the water inside, and wipe with a soft cloth.

SPECIFICATIONS

Mini harmonica, 5 holes 10 reeds

● Metal minor (Am key)

Draw	B	D	F	G	B
Blow	A	C	E	A	C

● Metal major (C key)

Draw	D	F	A	B	D
Blow	C	E	G	C	E

There are two models of C major and A minor key.