

Hammond XK-3C Preset Contents	Bank Number	C	C	C	C	C	C	C	C	C	C	C	
	Preset Number	C	C#	D	D#	E	F	F#	G	G#	A	A#	
	Bank Name	Special	Special	Special	Special	Special	Special	Special	Special	Special	Special	Special	
	Preset Name	Cancel	Jimmy	Lo & Hi 1	Warmth	Groove	Funky	Purple	Funky 2	FullTibias	Full Organ	FullChurch	
UpperDrawbar	VoiceType	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	
	DrawbarClickAttack	8	8	8	8	8	8	8	8	8	8	8	
	DrawbarClickRelease	8	8	8	8	8	8	8	8	8	8	8	
	DrawbarEnvAttack	0	0	0	0	0	0	0	0	0	0	0	
	DrawbarEnvRelease	0	0	0	0	0	0	0	0	0	0	0	
	FoldBackLow	12	12	12	12	12	12	12	12	12	12	12	
	FoldBackHi	43	43	43	43	43	43	43	43	43	43	43	
	BendLengthDown	2	2	2	2	2	2	2	2	2	2	2	
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2	
	DrawbarClickLpf	110	110	110	110	110	110	110	110	110	110	127	
	BendMode	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	
	BendTime	14	14	14	14	14	14	14	14	14	30	30	
	BendAmp	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	Btype1Number	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	Btype2Number	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	
	MellowNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	BriteNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	SawNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	Reg16	0	8	8	8	8	8	8	8	8	8	8	
	Reg513	0	8	8	4	8	8	8	8	0	8	2	
	Reg8	0	8	0	8	8	8	8	8	8	8	8	
	Reg4	0	0	0	8	0	0	8	0	8	8	8	
	Reg223	0	0	0	0	0	0	0	0	0	8	6	
	Reg2	0	0	0	0	0	0	0	8	8	8	8	
	Reg135	0	0	0	0	0	8	0	8	0	6	4	
	Reg113	0	0	0	0	0	8	0	8	0	6	4	
	Reg1	0	0	8	0	8	8	8	0	8	6	7	
	Percussion	Second	Off	Off	Off	Off	Off	Off	On	Off	Off	Off	Off
		Third	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	Off
		FastDecay	Off	On	Off	Off	Off	Off	Off	On	Off	Off	Off
PercSoft		Off	On	Off	Off	Off	Off	On	Off	Off	Off	Off	
LevelSoft		5	5	5	5	5	5	5	5	5	5	5	
LevelNormal		11	11	11	11	11	11	11	11	11	11	11	
DecayFast		2	2	2	2	2	2	2	2	2	2	2	
DecayNormal		5	5	5	5	5	5	5	5	5	5	5	
Touch		On	On	On	On	On	On	On	On	On	On	On	
Velocity		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
KeyTrack		On	On	On	On	On	On	On	On	On	On	On	
OneFootCancel		On	On	On	On	On	On	On	On	On	On	On	
DrawbarLevel		-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	
IntZone		SplitOn	Off	On	Off	On	Off	On	Off	On	Off	On	Off
	ManualBass	Off	Off	Off	Off	Off	Off	Off	Off	Off	On	Off	
	PedalRangeHi	59	59	59	59	59	59	59	59	59	96	59	
	SplitPoint	59	59	59	59	59	59	59	59	59	59	59	
	SplitLowerOctave	1	0	1	0	0	0	0	0	1	0	1	
Animation	LeslieOn	Off	On	On	On	On	On	Off	On	On	On	On	
	LeslieFast	Off	Off	On	Off	On	On	Off	On	On	On	Off	
	VibratoOn	Off	On	Off	On	On	On	Off	On	Off	Off	Off	
	VibratoMode	Vibrato1	Chorus3	Chorus3	Chorus3	Chorus2	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	
	VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	
	OdDriveLevel	0	10	0	48	13	0	52	0	18	20	0	
	LeslieBrake	Off	Off	On	Off	On	On	Off	On	On	On	Off	
	LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	
	LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	OdOn	Off	On	On	On	On	On	Off	On	Off	On	Off	
	OdPreampType	DualXU	DualXU	SnglU7	DualXU	DualXU	DualXU	SnglU7	SnglU7	DualXU	DualXU	DualXU	
	OdBlend	32	32	32	24	32	32	32	32	32	32	32	
	OdExpCtrlOn	Off	Off	Off	On	Off	Off	Off	On	Off	Off	Off	
	OdCrossover	300Hz	300Hz	300Hz	200Hz	300Hz	400Hz	800	400Hz	300Hz	400Hz	400Hz	
	OdHfInvert	On	On	On	On	On	On	On	On	On	On	On	
	V1Depth	8	8	8	8	8	8	8	8	8	8	8	
	V2Depth	11	11	11	11	11	11	11	11	11	11	11	
	V3Depth	14	14	14	14	14	14	14	14	14	14	14	
	C1Depth	8	8	8	8	8	8	8	8	8	8	8	
	C2Depth	11	11	11	11	11	11	11	11	11	11	11	
	C3Depth	14	14	14	14	14	14	14	14	14	14	14	
	TremDepth	8	8	8	8	8	8	8	8	8	8	8	
ChoEnfLev	6	6	6	6	6	6	6	6	6	6	6		
OdBiasU	32	32	32	32	32	32	32	32	32	32	32		
OdBiasX	32	32	32	32	32	32	32	32	32	32	32		
EqRev	EqBassGain	Plus0	Plus3	Plus0	Plus3	Plus3	Plus3	Plus0	Plus3	Plus3	Plus3	Plus3	
	EqMidGain	Plus0	Plus0	Plus0	Plus0	Plus0	Plus3	Plus6	Plus3	Plus0	Plus3	Plus0	
	EqTrebleGain	Plus0	Plus3	Plus0	Plus3	Plus0	Plus0	Plus0	Plus0	Plus0	Plus3	Plus3	
	EqMidFreq	1.2kHz	1.2kHz	1.2kHz	1.2kHz	1.2kHz	1.2kHz	20k	1.2kHz	480Hz	700Hz	700Hz	
	ReverbOn	Off	On	On	On	On	On	On	On	On	On	On	
	ReverbType	Hall1	Hall1	Hall1	Hall1	Hall1	Hall1	Hall1	Hall1	Hall1	Hall1	Church	
	ReverbLevel	8	4	6	4	5	5	5	5	6	5	6	
	ReverbTime	25	25	25	25	25	25	25	25	25	25	27	
	ReverbFb	0	0	0	0	0	0	0	0	0	0	0	
	ReverbDelayTime	0	0	0	0	0	0	0	0	0	0	0	
	LesOnReverb	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	EqToneControl	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
	LowerDrawbar	Reg16	0	8	0	8	8	8	7	8	0	8	0
		Reg513	0	5	0	4	5	5	4	4	0	8	0
Reg8		0	8	6	8	8	8	7	8	6	8	6	
Reg4		0	0	5	2	0	0	0	0	5	8	7	
Reg223		0	0	1	0	0	0	0	0	4	0	3	
Reg2		0	0	0	0	0	0	0	0	4	0	5	
Reg135		0	0	0	0	0	0	0	0	3	0	2	
Reg113		0	0	0	0	0	0	0	0	1	0	2	
Reg1		0	0	0	0	0	0	0	0	0	0	2	
VibratoLower		Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
Reg16		0	8	5	8	8	8	7	8	7	5	8	
Reg8	0	3	6	3	3	3	5	0	0	3	6		
VoiceType	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Normal	Normal		
DrawbarAttack	NoClick	SoftClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick		
BendLengthDown	2	2	2	2	2	2	2	2	2	2	2		
BendLengthUp	2	2	2	2	2	2	2	2	2	2	2		
SustainOn	Off	Off	Off	Off	Off	Off	Off	Off	On	Off	Off		
SustainLength	2	2	2	2	2	2	2	2	2	2	2		
DecayLength	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont		
Velocity	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
PedalKeyMode	Poly	Poly	Poly	Poly	Poly	Poly	Poly	Poly	Poly	Mono	Mono		

Hammond XK-3C Preset Contents	Bank Number	G#	G#	G#	G#	G#	G#	G#	G#	G#	G#	G#
	Preset Number	C	C#	D	D#	E	F	F#	G	G#	A	A#
	Bank Name	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1	Intro 1
	Preset Name	Cancel	WhiteShade	PercusBass	Four Beat	Funk Bass	Surf Coast	Blue Tigers	10thAvenue	Popcorn	Doubling	N.E.S.
UpperDrawbar	VoiceType	BType2	Mellow	BType2	BType2	BType2	Brite	Brite	Mellow	BType2	BType2	Brite
	DrawbarClickAttack	8	8	8	8	8	8	8	8	8	8	8
	DrawbarClickRelease	8	8	8	8	8	8	8	8	8	8	8
	DrawbarEnvAttack	0	0	0	0	0	0	0	0	0	0	0
	DrawbarEnvRelease	0	0	0	0	0	0	0	0	0	0	0
	FoldBackLow	12	12	0	12	12	12	12	12	12	12	12
	FoldBackHi	43	43	43	43	43	48	48	43	43	43	48
	BendLengthDown	2	2	12	2	12	2	2	2	2	2	2
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2
	DrawbarClickLpf	110	110	110	120	127	127	127	110	110	110	110
	BendMode	Bend	Bend	Motor	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend
	BendTime	14	14	35	14	14	14	14	14	14	14	14
	BendAmp	Off	Off	On	Off	Off	Off	Off	Off	Off	Off	Off
	Btype1Number	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
	Btype2Number	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2
	MellowNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
	BriteNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw1	tw0	tw0	tw0
	SawNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
	Reg16	0	8	4	3	6	5	6	0	0	8	0
	Reg513	0	0	4	3	0	0	0	0	0	5	0
	Reg8	0	8	5	4	6	8	8	5	0	8	5
	Reg4	0	8	5	5	6	8	8	5	0	8	0
	Reg223	0	0	5	6	0	0	0	8	0	5	7
	Reg2	0	8	0	0	6	8	8	8	0	0	0
	Reg135	0	0	0	0	0	0	0	8	0	4	0
	Reg113	0	0	0	0	0	0	0	4	8	0	3
	Reg1	0	8	0	0	6	0	8	8	0	0	3
	Percussion	Second	Off	Off	Off	Off	Off	Off	Off	On	Off	Off
		Third	Off	Off	On	On	Off	Off	Off	Off	On	Off
		FastDecay	Off	Off	On	On	Off	Off	Off	On	Off	Off
PercSoft		Off	Off	On	On	Off	Off	Off	Off	On	Off	
LevelSoft		5	5	2	5	5	5	5	5	5	5	
LevelNormal		11	11	6	11	11	11	11	11	10	11	
DecayFast		2	2	2	2	2	2	2	2	0	2	
DecayNormal		5	5	5	5	5	5	5	5	5	5	
Touch		On	On	On	On	On	On	On	On	Off	On	
Velocity		Off	Off	Off	On	Off	Off	Off	Off	On	Off	
KeyTrack		On	On	Off	On	On	On	On	On	Off	On	
OneFootCancel		On	On	On	On	On	On	On	On	On	On	
DrawbarLevel		-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	
SplitOn		Off	On	On	On	On	On	On	On	On	Off	
IntZone		ManualBass	Off	On	On	On	On	On	Off	Off	Off	Off
	PedalRangeHi	59	59	59	59	59	52	54	54	59	63	
	SplitPoint	59	59	59	59	59	52	54	54	59	63	
	SplitLowerOctave	1	1	0	1	1	1	1	1	1	0	
	Animation	Off	On	On	Off	Off	Off	Off	Off	On	On	
LeslieFast	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
VibratoOn	Off	Off	Off	On	On	On	On	On	On	Off		
VibratoMode	Vibrato1	Vibrato1	Vibrato1	Chorus3	Chorus2	Vibrato1	Chorus1	Chorus2	Vibrato1	Vibrato1		
VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	7.25Hz	6.83Hz	6.83Hz		
OdDriveLevel	0	0	0	0	0	0	0	40	0	0		
LeslieBrake	Off	On	Off	Off	Off	Off	Off	Off	Off	Off		
LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1		
LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
OdOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
OdPreampType	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7		
OdBlend	32	32	32	32	32	32	32	32	32	32		
OdExpCtrlOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off		
OdCrossover	300Hz	300Hz	300Hz	300Hz	300Hz	300Hz	300Hz	300Hz	300Hz	300Hz		
OdHfInvert	On	On	On	On	On	On	On	On	On	On		
V1Depth	8	8	8	8	8	8	8	8	8	8		
V2Depth	11	11	11	11	11	11	11	11	11	11		
V3Depth	14	14	14	14	14	14	14	14	14	14		
C1Depth	8	8	8	8	8	8	8	8	8	8		
C2Depth	11	11	11	11	11	11	11	11	11	11		
C3Depth	14	14	14	14	14	14	14	14	14	14		
TremDepth	8	8	8	8	8	8	8	8	8	8		
ChoEnfLev	6	6	6	6	6	6	6	6	6	6		
OdBiasU	32	32	32	32	32	32	32	32	32	32		
OdBiasX	32	32	32	32	32	32	32	32	32	32		
EqRev	EqBassGain	Plus0	Plus0	Plus3	Plus0	Plus3	Plus0	Plus3	Plus0	Mins6	Plus0	
	EqMidGain	Plus0	Plus0	Plus0	Plus6	Plus0	Plus0	Plus3	Plus2	Plus0	Plus0	
	EqTrebleGain	Plus0	Plus0	Plus3	Plus0	Plus3	Plus6	Plus3	Plus4	Plus0	Plus0	
	EqMidFreq	1.2kHz	480Hz	480Hz	2.0kHz	480Hz	480Hz	1.4kHz	2.9kHz	2.0kHz	480Hz	
	ReverbOn	Off	On	On	On	Off	On	On	On	On	On	
	ReverbType	Hall1	Plate	Room1	LiveHouse	Room1	Plate	Plate	Hall2	RevDly	Delay	
	ReverbLevel	8	10	8	10	7	9	10	8	9	10	
	ReverbTime	25	28	10	10	10	16	24	21	26	0	
	ReverbFb	0	0	0	0	0	0	0	0	8	0	
	ReverbDelayTime	0	0	0	0	0	0	0	0	36	20	
	LesOnReverb	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	EqToneControl	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
LowerDrawbar	Reg16	0	0	7	0	0	0	0	0	0	0	
	Reg513	0	0	7	0	0	0	0	0	0	0	
	Reg8	0	5	7	0	0	0	7	5	5	8	
	Reg4	0	3	0	0	0	0	6	4	4	4	
	Reg223	0	0	0	0	0	0	0	3	3	0	
	Reg2	0	4	0	0	0	0	0	0	0	0	
	Reg135	0	0	0	0	0	0	0	0	0	0	
	Reg113	0	0	0	0	0	0	0	0	0	0	
	Reg1	0	4	0	0	0	0	0	0	0	0	
	VibratoLower	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	Reg16	0	7	8	8	8	6	8	7	7	7	
	Reg8	0	0	0	2	0	6	2	3	3	3	
VoiceType	Muted	Muted	Normal	Muted	Synth	Muted	Muted	Muted	Muted	Muted		
DrawbarAttack	NoClick	NoClick	NoClick	SoftClick	SoftClick	NoClick	NoClick	NoClick	NoClick	NoClick		
BendLengthDown	2	2	12	2	12	2	2	2	2	2		
BendLengthUp	2	2	2	2	2	2	2	2	2	2		
SustainOn	Off	On	Off	On	On	Off	Off	Off	Off	Off		
SustainLength	2	2	2	1	1	2	2	2	2	2		
DecayLength	Cont	Cont	D1	D5	Cont	Cont	5	Cont	Cont	Cont		
Velocity	Off	Off	1	1	Off	Off	Off	Off	Off	Off		
PedalKeyMode	Mono	Mono	Mono	Poly	Mono	Mono	Poly	Mono	Mono	Mono		

Hammond XK-3C Preset Contents	Bank Number	A	A	A	A	A	A	A	A	A	A	A	A
	Preset Number	C	C#	D	D#	E	F	F#	G	G#	A	A#	A#
	Bank Name	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2	Intro 2
UpperDrawbar	Preset Name	Cancel	Soloist	ChokeNose	S.F.4ever	Tea Lounge	PrettyBaby	Triplet 90	Triplet100	Triplet110	Triplet120	Triplet130	
	Voice Type	BType2	BType2	BType2	Mellow	Mellow	Saw	BType2	BType2	BType2	BType2	BType2	
	DrawbarClickAttack	8	15	8	0	1	1	8	8	8	8	8	
	DrawbarClickRelease	8	15	8	0	1	1	8	8	8	8	8	
	DrawbarEnvAttack	0	0	0	0	0	0	0	0	0	0	0	
	DrawbarEnvRelease	0	0	0	0	0	0	0	0	0	0	0	
	FoldBackLow	12	12	12	12	12	12	12	12	12	12	12	
	FoldBackHi	43	43	43	43	43	48	43	43	43	43	43	
	BendLengthDown	2	12	12	2	2	2	2	2	2	2	2	
	BendLengthUp	2	2	2	2	2	2	2	2	2	2	2	
	DrawbarClickLpf	110	127	127	110	110	110	110	110	110	110	110	
	BendMode	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	
	BendTime	14	30	14	14	14	14	14	14	14	14	14	
	BendAmp	Off	On	On	Off	Off	Off	Off	Off	Off	Off	Off	
	Btype1Number	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	Btype2Number	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	
	MellowNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	BriteNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	SawNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	
	Reg16	0	8	8	0	8	0	8	8	8	8	8	
	Reg513	0	8	8	0	0	0	8	8	8	8	8	
	Reg8	0	8	8	8	3	8	8	8	8	8	8	
	Reg4	0	8	8	3	0	8	8	8	8	8	8	
	Reg223	0	8	8	0	0	0	0	0	0	0	0	
	Reg2	0	8	8	0	7	0	0	0	0	0	0	
	Reg135	0	0	0	0	0	0	0	0	0	0	0	
	Reg113	0	8	8	0	0	0	0	0	0	0	0	
	Reg1	0	8	8	0	0	0	0	0	0	0	0	
	Second	Off	Off	On	Off	On	Off	Off	Off	Off	Off	Off	
	Third	Off	On	Off	Off	Off	Off	On	On	On	On	On	
	FastDecay	Off	On	On	Off	Off	Off	On	On	On	On	On	
	PercSoft	Off	Off	Off	Off	Off	Off	On	On	On	On	On	
	LevelSoft	5	5	6	5	2	5	5	5	5	5	5	
	LevelNormal	11	12	16	11	5	11	11	11	11	11	11	
	DecayFast	2	2	2	2	3	2	2	2	2	2	2	
	DecayNormal	5	5	6	5	6	5	5	5	5	5	5	
	Touch	On	On	On	On	On	On	On	On	On	On	On	
	Velocity	Off	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	
	KeyTrack	On	Off	Off	On	Off	On	On	On	On	On	On	
	OneFootCancel	On	Off	Off	On	On	On	On	On	On	On	On	
	DrawbarLevel	-5dB	0dB	0dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	
	SplitOn	Off	Off	Off	On	On	On	Off	Off	Off	Off	Off	
	ManualBass	Off	On	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	PedalRangeHi	59	96	59	59	59	59	59	59	59	59	59	
	SplitPoint	59	59	59	54	59	54	59	59	59	59	59	
	SplitLowerOctave	1	1	1	1	1	1	1	1	1	1	1	
	Animation	LeslieOn	Off	On	On	Off	Off	On	On	On	On	On	
	LeslieFast	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	VibratoOn	Off	Off	Off	On	On	Off	Off	Off	Off	Off	Off	
	VibratoMode	Vibrato1	Vibrato1	Vibrato1	Vibrato1	Chorus2	Vibrato2	Vibrato1	Vibrato1	Vibrato1	Vibrato1	Vibrato1	
	VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.10Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	
	OdDriveLevel	0	63	63	0	0	36	0	0	0	0	0	
	LeslieBrake	Off	On	On	Off	Off	On	On	On	On	On	On	
	LeslieCabinet	#1	#4	#4	#1	#1	#1	#1	#1	#1	#1	#1	
	LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	OdOn	Off	On	On	Off	Off	Off	Off	Off	Off	Off	Off	
	OdPreampType	SnglU7	SnglX7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	SnglU7	
	OdBlend	32	32	32	32	32	32	32	32	32	32	32	
	OdExpCtrlOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	OdCrossover	300Hz	300Hz	300Hz	300Hz	300Hz	800Hz	300Hz	300Hz	300Hz	300Hz	300Hz	
	OdHfnvert	On	On	On	On	On	On	On	On	On	On	On	
	V1Depth	8	8	8	8	8	8	8	8	8	8	8	
	V2Depth	11	11	11	11	11	11	11	11	11	11	11	
	V3Depth	14	14	14	14	14	14	14	14	14	14	14	
	C1Depth	8	8	8	8	8	8	8	8	8	8	8	
	C2Depth	11	11	11	11	11	11	11	11	11	11	11	
	C3Depth	14	14	14	14	14	14	14	14	14	14	14	
	TremDepth	8	8	8	8	8	8	8	8	8	8	8	
	ChoEnfLev	6	6	6	6	6	6	6	6	6	6	6	
	OdBiasU	32	32	32	32	32	32	32	32	32	32	32	
	OdBiasX	32	32	32	32	32	32	32	32	32	32	32	
	EqRev	EqBassGain	Plus0	Plus9	Mins9	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
	EqMidGain	Plus0	Mins9	Plus8	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
	EqTrebleGain	Plus0	Plus9	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
	EqMidFreq	480Hz	1.0kHz	2.4kHz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	480Hz	
	ReverbOn	Off	On	On	Off	On	On	On	On	On	On	On	
	ReverbType	Hall1	PanDly	Room1	Room1	LiveHouse	Hall2	Delay	Delay	Delay	Delay	Delay	
	ReverbLevel	8	8	15	6	8	8	8	8	8	8	8	
	ReverbTime	25	0	15	19	21	21	0	0	0	0	0	
	ReverbFb	0	8	0	0	0	0	8	8	8	8	8	
	ReverbDelayTime	0	45	0	0	0	0	45	44	43	42	41	
	LesOnReverb	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	EqToneControl	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	
	LowerDrawbar	Reg16	0	0	0	0	0	0	0	0	0	0	
	Reg513	0	0	0	0	0	0	0	0	0	0	0	
	Reg8	0	0	0	1	3	4	0	0	0	0	0	
	Reg4	0	0	0	2	3	5	0	0	0	0	0	
	Reg223	0	0	0	2	3	2	0	0	0	0	0	
	Reg2	0	0	0	2	0	1	0	0	0	0	0	
	Reg135	0	0	0	2	0	0	0	0	0	0	0	
	Reg113	0	0	0	1	0	0	0	0	0	0	0	
	Reg1	0	0	0	0	0	0	0	0	0	0	0	
	VibratoLower	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	PedalDrawbar	Reg16	0	8	8	5	6	8	0	0	0	0	
	Reg8	0	0	0	2	0	0	0	0	0	0	0	
	Voice Type	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	Muted	
	DrawbarAttack	NoClick	Normal	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	
	BendLengthDown	2	12	2	2	2	2	2	2	2	2	2	
	BendLengthUp	2	2	0	2	2	2	2	2	2	2	2	
	SustainOn	Off	Off	Off	Off	On	On	Off	Off	Off	Off	Off	
	SustainLength	2	2	2	2	3	2	2	2	2	2	2	
	DecayLength	Cont	Cont	Cont	Cont	Cont	5	Cont	Cont	Cont	Cont	Cont	
	Velocity	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	
	PedalKeyMode	Mono	Poly	Poly	Poly	Mono	Mono	Poly	Poly	Poly	Poly	Poly	

Hammond XK-3C Preset Contents	Bank Number	A#	A#	A#	A#	A#	A#	A#	A#	A#	A#	A#
	Preset Number	C	C#	D	D#	E	F	F#	G	G#	A	A#
	Bank Name	DemoSong	DemoSong SomeSlow 1	DemoSong SomeSlow 2	DemoSong SomeSlow 3	DemoSong AcidWash 1	DemoSong AcidWash 2	DemoSong B3 Cookin	DemoSong Shooting 1	DemoSong Shooting 2	DemoSong Liberatio1	DemoSong Liberatio2
UpperDrawbar	Voice Type	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2	BType2
DrawbarClickAttack	8	8	8	8	8	8	8	8	8	8	8	8
DrawbarClickRelease	8	8	8	8	8	8	8	8	8	8	8	8
DrawbarEnvAttack	0	0	0	0	0	0	0	0	0	0	0	0
DrawbarEnvRelease	0	0	0	0	0	0	0	0	0	0	0	0
FoldBackLow	12	12	12	12	12	12	12	12	12	12	12	12
FoldBackHi	43	43	43	43	43	43	43	43	43	43	43	43
BendLengthDown	2	2	2	2	2	2	2	2	2	2	2	2
BendLengthUp	2	2	2	2	2	2	2	2	2	2	2	2
DrawbarClickLpf	110	110	110	110	110	110	110	110	127	127	110	110
BendMode	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend	Bend
BendTime	14	30	30	30	30	30	30	30	30	30	30	30
BendAmp	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
Btype1Number	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
Btype2Number	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2	tw2
MellowNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
BriteNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
SawNumber	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0	tw0
Reg16	0	8	8	8	8	8	8	8	0	8	8	8
Reg513	0	8	5	0	0	8	8	8	0	0	8	8
Reg8	0	8	5	0	0	8	8	8	0	8	8	8
Reg4	0	3	3	0	0	0	0	8	0	0	8	8
Reg223	0	0	0	0	0	0	0	0	0	0	4	6
Reg2	0	0	0	0	0	0	0	8	0	0	3	6
Reg135	0	0	0	0	0	0	0	8	0	6	0	5
Reg113	0	0	0	0	0	0	0	8	0	5	0	5
Reg1	0	5	3	0	0	0	0	8	0	4	0	5
Percussion	Second	Off	Off	Off	On	Off	Off	Off	On	Off	Off	Off
Third	Off	On	On	On	Off	On	Off	Off	Off	On	On	Off
FastDecay	Off	On	On	On	Off	On	On	Off	Off	On	On	On
PercSoft	Off	On	On	On	On	On	On	Off	Off	On	On	On
LevelSoft	5	6	6	6	6	6	6	5	6	6	5	5
LevelNormal	11	12	12	12	12	11	11	11	11	11	11	11
DecayFast	2	3	3	3	3	5	5	2	2	5	2	2
DecayNormal	5	6	6	6	6	8	8	5	5	8	5	5
Touch	On	On	On	On	On	On	On	On	On	On	On	On
Velocity	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
KeyTrack	On	On	On	On	On	On	On	On	On	On	On	On
OneFootCancel	On	On	On	On	On	On	On	On	On	On	On	On
DrawbarLevel	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-5dB	-3dB	-5dB
IntZone	SplitOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
ManualBass	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
PedalRangeHi	59	59	59	59	59	59	59	59	59	59	59	59
SplitPoint	59	59	59	59	59	59	59	59	52	52	59	59
SplitLowerOctave	1	0	0	0	0	0	0	0	1	1	0	0
Animation	LeslieOn	Off	On	On	On	On	On	On	On	On	On	On
LeslieFast	Off	Off	Off	Off	Off	Off	Off	Off	Off	On	Off	On
VibratoOn	Off	Off	Off	Off	Off	Off	Off	On	Off	On	Off	Off
VibratoMode	Vibrato1	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus3	Chorus1	Chorus1
VibratoSpeed	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.83Hz	6.50Hz	6.50Hz
OdDriveLevel	0	32	32	32	32	20	20	28	0	0	58	63
LeslieBrake	Off	On	On	On	On	Off	Off	On	Off	Off	Off	Off
LeslieCabinet	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1	#1
LeslieModOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
OdOn	Off	On	On	On	On	On	On	On	Off	Off	On	On
OdPreampType	SngLU7	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU	DualXU
OdBlend	32	32	32	32	32	32	32	32	32	32	32	32
OdExpCtrlOn	Off	On	On	On	On	Off	Off	Off	Off	Off	On	On
OdCrossover	300Hz	400Hz	400Hz	400Hz	400Hz	400Hz	400Hz	400Hz	400Hz	400Hz	300Hz	300Hz
OdHfInvert	On	On	On	On	On	On	On	On	On	On	On	On
V1Depth	8	8	8	8	8	8	8	8	8	8	8	8
V2Depth	11	11	11	11	11	11	11	11	11	11	11	11
V3Depth	14	14	14	14	14	14	14	14	14	14	14	14
C1Depth	8	8	8	8	8	8	8	8	8	8	8	8
C2Depth	11	11	11	11	11	11	11	11	11	11	11	11
C3Depth	14	14	14	14	14	14	14	14	14	14	14	14
TremDepth	8	8	8	8	8	8	8	8	8	8	8	8
ChoEnfLev	6	6	6	6	6	6	6	6	6	6	6	6
OdBiasU	32	32	32	32	32	48	48	32	32	32	32	32
OdBiasX	32	32	32	32	32	32	32	32	32	32	32	32
EqRev	EqBassGain	Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus7	Plus7
EqMidGain	Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus0	Plus0
EqTrebleGain	Plus0	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3	Plus3
EqMidFreq	1.2kHz	700Hz	700Hz	700Hz	700Hz	700Hz	700Hz	700Hz	700Hz	700Hz	480Hz	480Hz
ReverbOn	Off	On	On	On	On	On	On	On	On	On	On	On
ReverbType	Hall1	Hall1	Hall1	Hall1	Hall1	Hall2	Hall2	Hall2	Plate	Plate	Church	Church
ReverbLevel	8	8	8	8	8	7	7	7	10	10	8	10
ReverbTime	25	25	25	25	25	25	25	25	28	28	14	27
ReverbFb	0	0	0	0	0	0	0	0	0	0	0	0
ReverbDelayTime	0	45	45	45	45	45	45	45	0	0	0	0
LesOnReverb	Off	Off	Off	Off	Off	Off	Off	On	Off	Off	Off	Off
EqToneControl	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0	Plus0
LowerDrawbar	Reg16	0	0	8	8	8	8	8	0	0	2	3
Reg513	0	0	3	3	3	4	4	8	0	0	2	3
Reg8	0	0	8	8	8	8	8	8	6	6	8	8
Reg4	0	6	0	6	0	0	0	8	6	5	7	6
Reg223	0	0	0	0	0	0	0	0	0	0	5	4
Reg2	0	0	0	0	0	0	0	0	0	0	4	3
Reg135	0	0	0	0	0	0	0	0	0	0	0	0
Reg113	0	0	0	0	0	0	0	0	0	0	2	0
Reg1	0	0	0	0	0	0	0	0	0	0	1	0
VibratoLower	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
PedalDrawbar	Reg16	0	7	7	7	0	0	8	8	8	8	8
Reg8	0	0	0	0	0	0	0	0	0	0	4	4
Voice Type	Muted	Muted	Muted	Muted	Muted	Muted	Normal	Normal	Normal	Normal	Muted	Muted
DrawbarAttack	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick	NoClick
BendLengthDown	2	0	0	0	0	2	2	0	2	2	2	2
BendLengthUp	2	0	0	0	0	2	2	0	2	2	2	2
SustainOn	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
SustainLength	2	2	2	2	2	3	3	2	4	4	3	3
DecayLength	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont	Cont
Velocity	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
PedalKeyMode	Mono	Poly	Poly	Poly	Poly	Mono	Mono	Poly	Poly	Poly	Poly	Poly

Hammond XK-3C Preset Contents	Bank Number Preset Number Bank Name Preset Name	Default
UpperDrawbar	Voice Type	BType2
	DrawbarClickAttack	8
	DrawbarClickRelease	8
	DrawbarEnvAttack	0
	DrawbarEnvRelease	0
	FoldBackLow	12
	FoldBackHi	43
	BendLengthDown	2
	BendLengthUp	2
	DrawbarClickLpf	115
	BendMode	Bend
	BendTime	14
	BendAmp	Off
	Btype1Number	tw0
	Btype2Number	tw0
	MellowNumber	tw0
	BriteNumber	tw0
	SawNumber	tw0
	Reg16	0
	Reg513	0
	Reg8	0
	Reg4	0
	Reg223	0
	Reg2	0
	Reg135	0
	Reg113	0
	Reg1	0
Percussion	Second	Off
	Third	Off
	FastDecay	Off
	PercSoft	Off
	LevelSoft	5
	LevelNormal	11
	DecayFast	2
	DecayNormal	6
	Touch	On
	Velocity	Off
	KeyTrack	On
	OneFootCancel	On
	DrawbarLevel	-5dB
IntZone	SplitOn	Off
	ManualBass	Off
	PedalRangeHi	59
	SplitPoint	59
	SplitLowerOctave	0
Animation	LeslieOn	Off
	LeslieFast	Off
	VibratoOn	Off
	VibratoMode	Chorus3
	VibratoSpeed	6.83Hz
	OdDriveLevel	0
	LeslieBrake	Off
	LeslieCabinet	#1
	LeslieModOn	Off
	OdOn	Off
	OdPreampType	DualXU
	OdBlend	32
	OdExpCtrlOn	On
	OdCrossover	300Hz
	OdHfInvert	On
	V1Depth	8
	V2Depth	11
	V3Depth	14
	C1Depth	8
	C2Depth	11
	C3Depth	14
	TremDepth	8
	ChoEnfLev	9
OdBiasU	32	
OdBiasX	32	
EqRev	EqBassGain	Plus0
	EqMidGain	Plus0
	EqTrebleGain	Plus0
	EqMidFreq	1.2kHz
	ReverbOn	Off
	ReverbType	Hall1
	ReverbLevel	5
	ReverbTime	23
	ReverbFb	0
	ReverbDelayTime	0
	LesOnReverb	Off
EqToneControl	Plus0	
LowerDrawbar	Reg16	0
	Reg513	0
	Reg8	0
	Reg4	0
	Reg223	0
	Reg2	0
	Reg135	0
	Reg113	0
	Reg1	0
	VibratoLower	Off
PedalDrawbar	Reg16	0
	Reg8	0
	Voice Type	Muted
	DrawbarAttack	NoClick
	BendLengthDown	2
	BendLengthUp	2
	SustainOn	Off
	SustainLength	2
	DecayLength	Cont
	Velocity	Off
	PedalKeyMode	Poly