

## 仕 様

鍵盤数・音域：アルト37鍵盤 f~f<sup>3</sup>

材 質：マホガニー(カバー)、ローズウッド・ブナ(鍵盤表面)、リン青銅(リード)、ABS(樹脂部)

寸法 / 重量：W502×D128×H65mm / 1100g

付 属 品：ソフトケース(MP-2006)

マウスピース3種(特製ショート/MP-141・S型/MP-151・L字ジョイントロング/MP-171)

備 考：ストラップピン付き

## SPECIFICATIONS

Keys/Range : Alto 37 keys / f~f<sup>3</sup>

Size/Weight : W20" x D5" x H2.5" (W502mm x D128mm x H65mm) / 2.4lb (1100g)

Accessories : Soft bag/MP-2006, Three mouthpieces (Special short mouthpiece/MP-141, S shaped mouthpiece/MP-151, Mouthpiece with tube and L shaped joint/MP-171)

Notes : With Strap buttons

## OPTIONS



W-37 with KSS-2

KSS-1 / KSS-2 / KSH-1 / KSH-2

### 鍵盤ハーモニカストラップ

両手演奏時のサポートに。  
鍵盤ハーモニカ演奏に適した長さです。

### Melodion Strap

Providing support during two-handed playing.  
Its length is suitable for Melodion performance.

株式会社 鈴木楽器製作所

SUZUKI MUSICAL INST. MFG. CO., LTD.



# 木製鍵盤ハーモニカ

W-37

取扱説明書

この度は弊社製品をお買い上げくださいます。誠にありがとうございます。

本製品は木材(天然木)を使用しています。木材は温度や湿度の変化に弱く、割れやすい性質があります。

本紙に記載の注意事項を必ずお読みいただき正しくご使用・保管してください。

また、天然木を使用しているため、木目や色、節目等が個々に異なり、時間が経つにつれ色も変化し風合いが出ます。

これらの特徴をあらかじめご了承ください。

# Wooden Alto Melodion

W-37

Instructions

Thank you very much for purchasing our product. This instrument is made of wood (natural wood). The wood has the property of weakness against the change in temperature and humidity, and splits easily. Please be sure to read the following precautions thoroughly so that the product can be used and stored correctly. Also, since the natural wood is used, the wood grain, color, knot and so on are different individually, and the color will be changed and look even better as they get older. Please understand these features.


## ⚠ 使用上の注意

●温度や湿度が高い場所、またエアコンなどによって急激に温度・湿度が変化する場所での使用や保管はしないでください。木材の膨張や変形・割れ、またカビなどの原因となります。本製品の使用・保管は、直射日光の当たらない風通しの良い場所でおこなってください。●もし製品が濡れてしまった場合は、すぐに乾いたやわらかい布で水分をしっかりと拭き取り、陰干ししてよく乾かしてください。●本製品を改造・分解しないでください。製品が破損する原因となります。●本製品をぶつけたり、落としたり、また製品の上に重いものや硬いものを乗せたりしないでください。故障や破損の原因となります。●本製品に異物や液体を入れないでください。故障や破損の原因となります。●お手入れはやわらかい布でから拭きしてください。アルコール、シンナー、ベンジン等の使用は製品を傷めますので絶対にしないでください。

【木部のお手入れについて】 木部の乾燥が気になる場合は、市販の木製楽器お手入れ用オイルをやわらかい布に含ませ、やさしく拭いてください。


## 各部の名称

マウスピース差し込み口

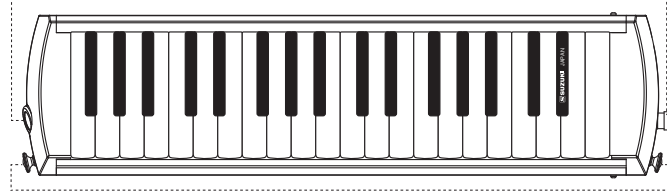

だ液抜き  
キャップ

使用後は内部の水分を抜いてください。水分が残ったままでの保管は製品を傷めます。

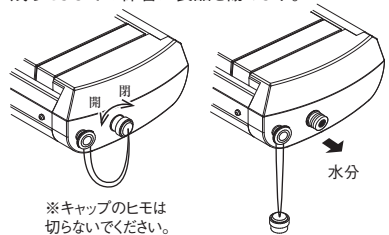

※キャップのヒモは  
切らないでください。

### だ液抜きの仕方

本体右側にある金属製のネジ式キャップを開け、取り外します。マウスピース差し込み口から強く息を吹き込んで内部の水分を抜きます。この時鍵盤を押さないようご注意ください。その後、キャップをしっかりと閉めてください。



## ストラップピン

鍵盤ハーモニカストラップ(別売)取り付け用ピンです。ストラップご使用の際には、ストラップが外れて楽器が落下したりしないよう、しっかりと取り付けください。またストラップの説明書の指示に従って正しくご使用ください。

## 【背面】

## 【付属品】

ハンドストラップ

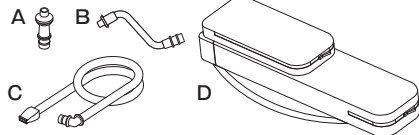

- A : 特製ショート唄口/MP-141
- B : S型唄口/MP-151
- C : L字ジョイントロングマウスピース/MP-171
- D : ソフトケース/MP-2006


## ⚠ CAUTION

●Do not use or store this instrument in or near high temperatures or humidity atmospheres, or the locations with sudden temperature changes and high humidity by using air conditioner and so on. This could cause expanding and cracking of the wood, or growth of mold on the wood. Please store this instrument in an area out of direct sunlight and airy. ●When the instrument becomes wet, please wipe off the water thoroughly with a soft cloth immediately and dry it in the shade. ●Do not modify or disassemble the instrument. This could cause damage. ●Do not hit or drop this instrument, or place a heavy or a hard object on it. It could cause damage. ●Do not put any foreign object or liquids inside. It could cause damage. ●Please clean this instrument with a dry soft cloth. Do not use thinner's or petro-chemical-based polishes.

【How to care for wooden part】 If you are concerned about dryness of the wooden part, please wipe gently with a soft cloth containing the oil for wooden musical instruments sold in stores.


## PARTS AND ACCESSORIES

Attach a mouthpiece here

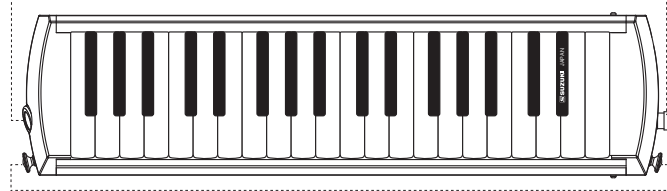

Screw cap

Release built-up moisture from the instrument after use.

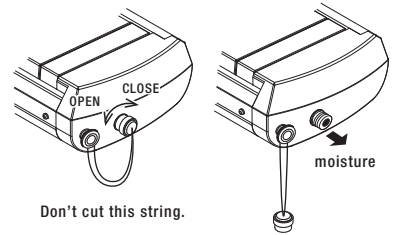

Don't cut this string.

How to release the moisture

First, open the screw cap. Then, blow strongly from mouthpiece side without pressing any keys. Moisture is released from the hole. After that, close the screw cap.



## Strap buttons

These are the buttons for attaching the Melodion strap(sold separately). When using the strap, please make sure to attach it firmly to prevent the instrument comes loose and falls. Also, please follow the instruction of the strap and use it correctly.

## 【Back side】

## 【Accessories】

Hand strap

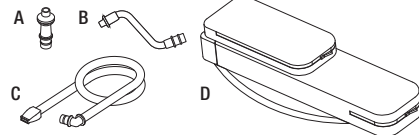

- A : Special short mouthpiece/MP-141
- B : S shaped mouthpiece/MP-151
- C : Mouthpiece with tube and L shaped joint/MP-171
- D : Soft bag/MP-2006