


# SUZUKI ハーモニカマイク HMB-1/HMB-3/HMC-2 取扱説明書

この度はスズキハーモニカマイクをお買い上げいただきまして誠にありがとうございます。本製品を末永く、そして安全にご使用いただくため、この説明書をよくお読みください。お読みになった説明書はなくさないよう大切に保管してください。

## ■使用上の注意

●分解・改造はしないでください。故障の原因となります。●本製品に異物や液体を入れないでください。故障の原因となります。●異常を感じたら電源スイッチを切り、接続コードをはずし、お買い上げ販売店またはスズキ各営業所にご連絡ください。●温度が極端に高い場所、水気の近くや湿度の高い場所、ホコリの多い場所、振動の多い場所でのご使用・保管は故障の原因となりますのでおやめください。●お手入れはやわらかい布でカラ拭きしてください。アルコール・シンナー・ベンジン等は製品を痛めますので絶対に使用しないでください。

## ■各部の名称とはたらき

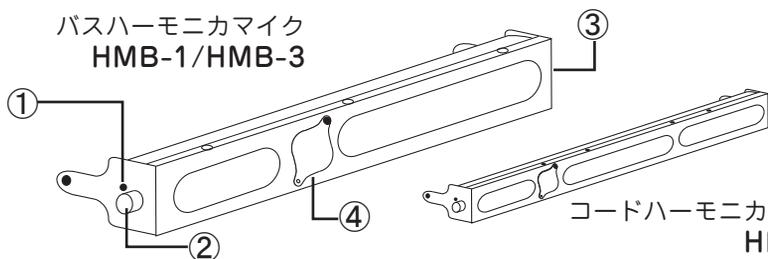

### ■付属品

●マイク取り付け用ネジ×2



●回転金具取り付け用ネジ×8



●回転金具×2



●接続コード×1




### ① ボリューム/電源スイッチ

ボリューム調整と電源ON/OFFを行います。「カチッ」と音がする所まで反時計回りに回すと電源OFF、時計回りに回すと電源ONとなりボリュームが上がります。電源をONにするには接続コードが接続されている必要があります。接続コードを取り外すと電源スイッチに関係なく電源はOFFとなります。

### ② バッテリーインジケータ

電源ONの状態ではボリューム/電源スイッチを押すとバッテリーインジケータが点灯します。バッテリーインジケータが点灯しない場合は電池が切れているので新しい電池に交換してください。

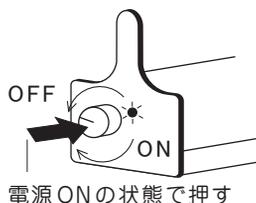

### ③ 出力ジャック

接続コードをつなぎます。

### ④ 電池ボックス

電池が入っています。電池は電池ボックスの中に斜めに差し込んでから(図1)、横にずらすように入れてください(図2)。取り出す時はその逆をおこなってください。

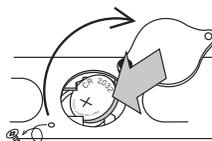


図1

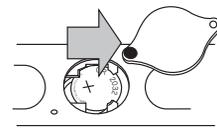


図2

※フタはネジを外し、↷の方向にずらして開けてください。

## ■ハーモニカへの取り付け方法

スズキハーモニカマイクの各機種は、それぞれ対応するスズキバスハーモニカ、またはスズキコードハーモニカに取り付けて使用します。(下はマイクとハーモニカの対応表)

| マイク品番 | 対応ハーモニカ品番                  |
|-------|----------------------------|
| HMB-1 | スズキバスハーモニカ SDB-39/SDB-39v2 |
| HMB-3 | スズキバスハーモニカ SDB-29/SDB-29v2 |
| HMC-2 | スズキコードハーモニカ SCH-48/BCH-48  |

### 〈取り付け手順〉

お手持ちのハーモニカの回転金具の種類によって、取り付け手順が異なります。



回転金具「A」 回転金具「B」

### ●お手持ちのハーモニカの回転金具が「A」の方 >>>


①→②→③の順で取り付けてください。

### ●お手持ちのハーモニカの回転金具が「B」の方 >>>


③の作業のみ行ってください。

ハーモニカマイク付属品の回転金具は使用いたしません。


### ① お手持ちのハーモニカについている回転金具をドライバーで左右とも取り外します。取り外すときはネジ穴を痛めないよう充分注意してください。(図はSDB-39)

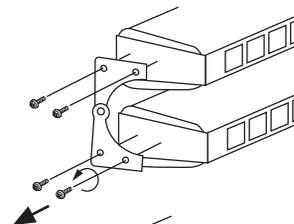

### ② 次にマイクに付属されている回転金具を回転金具取り付け用ネジで左右とも取り付けます。取り付ける時はネジ穴を痛めないよう充分注意してください。

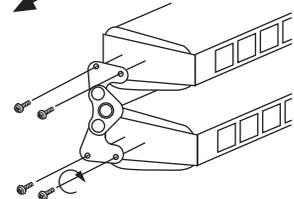


### ③ 回転金具のネジ穴にマイク取り付け用ネジで固定すれば完成です。

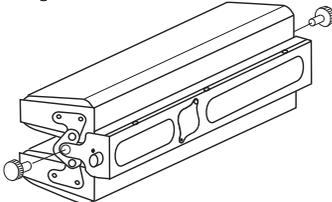

## ■使い方

アンプ等へ接続して使用します。アンプへの接続・使用方法はアンプの説明書ののってください。

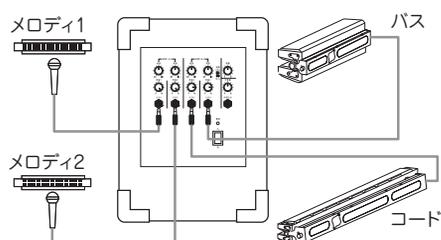

※図はスズキアンプ SPA-40Rへの接続例

## ■製品仕様

|        | HMB-1/HMB-3         | HMC-2           |
|--------|---------------------|-----------------|
| 全長     | 286/245 x 41 x 58mm | 594 x 41 x 58mm |
| 重量     | 200/175 g           | 350 g           |
| 出力レベル  | 4mV (-46dbm)        | 2mV (-52dbm)    |
| 電池     | リチウム電池CR2032        | リチウム電池CR2032    |
| 連続使用時間 | 約70時間               | 約50時間           |

株式会社 鈴木楽器製作所 〒430-0852 浜松市中区領家2-25-12  
TEL(053)461-2325 www.suzuki-music.co.jp

00457-05004 V.2.01  
7108-MM-196-B


Thank you for purchasing the SUZUKI HARMONICA MICROPHONE. Please read these instructions carefully for safety and long-term use.

## CARE OF YOUR HARMONICA

\*Please do not disassemble or modify. \*To avoid trouble, don't allow any objects or water into the microphone. \*Do not leave it near extreme heat or direct sunlight, and keep the microphone away from moisture, dust and heaters. \*To clean your microphone, use a soft cloth. \*Do not use solvents such as thinner or benzene as these chemicals can permanently damage your instrument. \*If you notice any malfunction or damage, switch off the power, take off the connection cable and contact the shop you purchased from or your local Suzuki dealer.

## CONTROLS AND FUNCTIONS

Bass harmonica microphone  
HMB-1/HMB-3

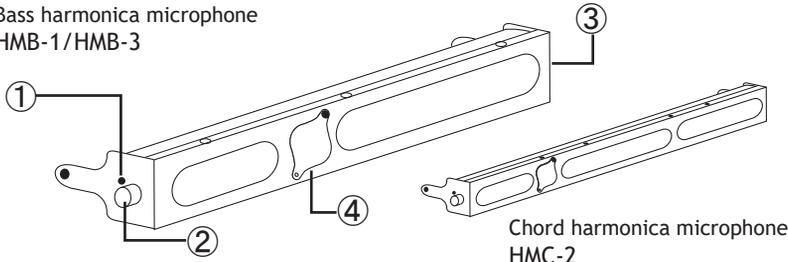

### ACCESSORIES

Screw with knob for attaching fixing microphone x 2



Small screw for attaching metal hinge fitting x 8



Metal Hinge Fitting x 2



Connection cable x 1




### 1 Power switch/Volume control knob

Turn clockwise for power on and volume control. Turn anticlockwise till you hear a 'click' to power off. Make sure the connection cable is connected!

### 2 Battery indicator

The indicator LED lights when the power switch is on. When the light goes out, it means the battery is dead and needs replacing.

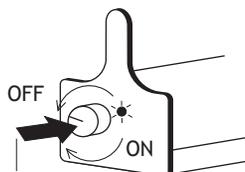


Push when the power is on.

### 3 Output jack


Connect the attached connection cable.

### 4 Battery box

On the rear of the microphone there is a small enclosure which holds a small battery (Lithium CR2032 or equiv.). The battery is inserted at an angle (drawing 1), and then slid inside (drawing 2). To remove, reverse the actions.

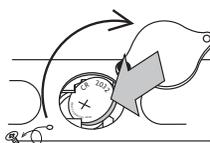

drawing 1

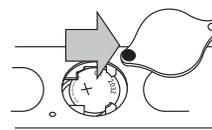

drawing 2

\* Remove the screw, then move the cover ↶ way and open.

## HOW TO SET UP THE MICROPHONE TO HARMONICA


| Microphone | Harmonica                             |
|------------|---------------------------------------|
| HMB-1      | SUZUKI Bass Harmonica SDB-39/SDB-39v2 |
| HMB-3      | SUZUKI Bass Harmonica SDB-29/SDB-29v2 |
| HMC-2      | SUZUKI Chord Harmonica SCH-48/BCH-48  |

\* If your harmonica has Hinge Fitting "A", please set up in order of 1 -> 2 -> 3.




Hinge Fitting "A"

\* If your harmonica has Hinge Fitting "B", please just do 3. You do not need to use the enclosed Hinge Fitting in this case.

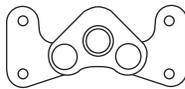


Hinge Fitting "B"


1 At first, take off the hinge fittings of your harmonica with a screw driver. Be careful not to damage the screw head by applying suitable pressure when unscrewing.

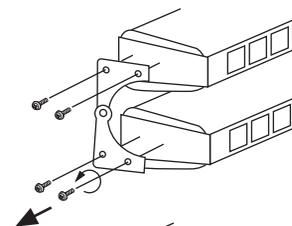


2 Next, fix the new hinge fittings enclosed with microphone by a screw driver. Take care as above and avoid over tightening (this could strip the thread).

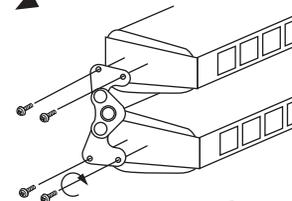

3 Attach the microphone using the enclosed screws with hand knobs.

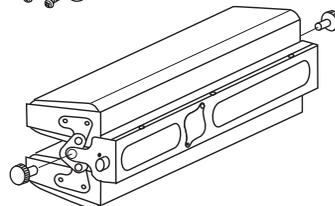

## EXAMPLE

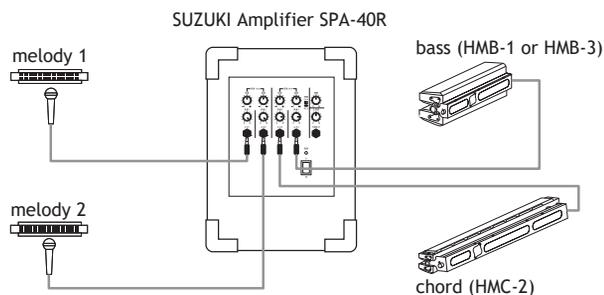

## SPECIFICATIONS

|                            | HMB-1/HMB-3         | HMC-2            |
|----------------------------|---------------------|------------------|
| Dimension                  | 286/245 x 41 x 58mm | 594 x 41 x 58mm  |
| Weight                     | 200/175g            | 350 g            |
| Output                     | 4mV (-46 dbm)       | 2mV (-52 dbm)    |
| Battery                    | Lithium CR2032      | Lithium CR2032   |
| Consecutive playing period | Approx. 70 hours    | Approx. 50 hours |