

仕 様

鍵盤数・音域：アルト37鍵盤 f～f³

材 質：ウォルナット(カバー)、ローズウッド・ブナ(鍵盤表面)、リン青銅(リード)、ABS(樹脂部)

寸 法 / 重 量：W502×D128×H65mm / 1100g

付 属 品：ソフトケース(MP-2006)

マウスピース3種(特製ショート/MP-141・S型/MP-151・L字ジョイントロング/MP-171)

備 考：ストラップピン付き

SPECIFICATIONS

Keys/Range : Alto 37 keys / f～f³

Size/Weight : W20" x D5" x H2.5" (W502mm x D128mm x H65mm) / 2.4lb (1100g)

Accessories : Soft bag/MP-2006, Three mouthpieces (Special short mouthpiece/MP-141,
S shaped mouthpiece/MP-151, Mouthpiece with tube and L shaped joint/MP-171)

Notes : With Strap buttons

株式会社 鈴木楽器製作所

〒430-0852 静岡県浜松市中央区領家2-25-7 TEL (053)461-2325 www.suzuki-music.co.jp

SUZUKI MUSICAL INST. MFG. CO., LTD.

2-25-7 Ryoke, Chuo-Ku, Hamamatsu Japan suzukimusic-global.com



お問合せ
フォーム

00457-00033
4203-1C2D-APR-MM-243-E



木製鍵盤ハーモニカ

W-37C

取扱説明書

この度は弊社製品をお買い上げくださいます。誠にありがとうございます。

本製品は木材(天然木)を使用しています。木材は温度や湿度の変化に弱く、割れやすい性質があります。

本紙に記載の注意事項を必ずお読みいただき正しくご使用・保管してください。

また、天然木を使用しているため、木目や色、節目等が個々に異なり、時間が経つにつれ色も変化し風合いが出ます。

これらの特徴をあらかじめご了承ください。

Wooden Alto Melodion

W-37C

Instructions


Thank you very much for purchasing our product. This instrument is made of wood (natural wood). The wood has the property of weakness against the change in temperature and humidity, and splits easily. Please be sure to read the following precautions thoroughly so that the product can be used and stored correctly. Also, since the natural wood is used, the wood grain, color, knot and so on are different individually, and the color will be changed and look even better as they get older. Please understand these features.

! 使用上の注意


●温度や湿度が高い場所、またエアコンなどによって急激に温度・湿度が変化する場所での使用や保管はしないでください。木材の膨張や変形・割れ、またカビなどの原因となります。本製品の使用・保管は、直射日光の当たらない風通しの良い場所でおこなってください。●もし製品が濡れてしまった場合は、すぐに乾いたやわらかい布で水分をしっかりと拭き取り、陰干ししてよく乾かしてください。●本製品を改造・分解しないでください。製品が破損する原因となります。●本製品をぶつけたり、落としたり、また製品の上に重いものや硬いものを乗せたりしないでください。故障や破損の原因となります。●本製品に異物や液体を入れないでください。故障や破損の原因となります。●お手入れはやわらかい布でから拭きしてください。アルコール、シンナー、ベンジン等の使用は製品を傷めますので絶対にしないでください。

【木部のお手入れについて】 木部の乾燥が気になる場合は、市販の木製楽器お手入れ用オイルをやわらかい布に含ませ、やさしく拭いてください。


各部の名称

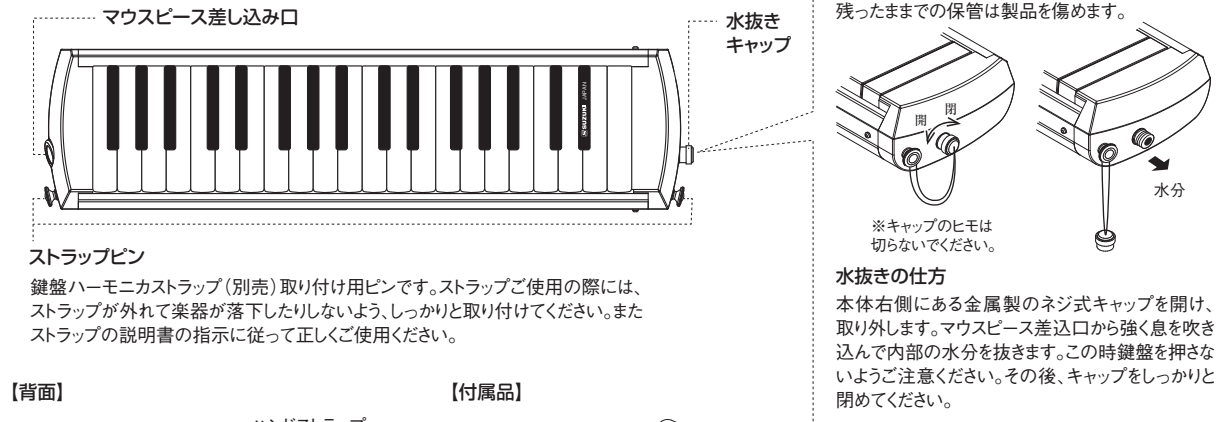

【背面】

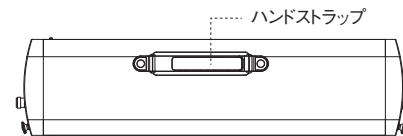

【付属品】

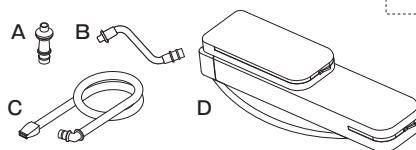


- A: 特製ショート唄口/MP-141
B: S型唄口/MP-151
C: L字ジョイントロングマウスピース/MP-171
D: ソフトケース/MP-2006

! CAUTION


●Do not use or store this instrument in or near high temperatures or humidity atmospheres, or the locations with sudden temperature changes and high humidity by using air conditioner and so on. This could cause expanding and cracking of the wood, or growth of mold on the wood. Please store this instrument in an area out of direct sunlight and airy. ●When the instrument becomes wet, please wipe off the water thoroughly with a soft cloth immediately and dry it in the shade. ●Do not modify or disassemble the instrument. This could cause damage. ●Do not hit or drop this instrument, or place a heavy or a hard object on it. It could cause damage. ●Do not put any foreign object or liquids inside. It could cause damage. ●Please clean this instrument with a dry soft cloth. Do not use thinner's or petro-chemical-based polishes.

【How to care for wooden part】 If you are concerned about dryness of the wooden part, please wipe gently with a soft cloth containing the oil for wooden musical instruments sold in stores.


PARTS AND ACCESSORIES

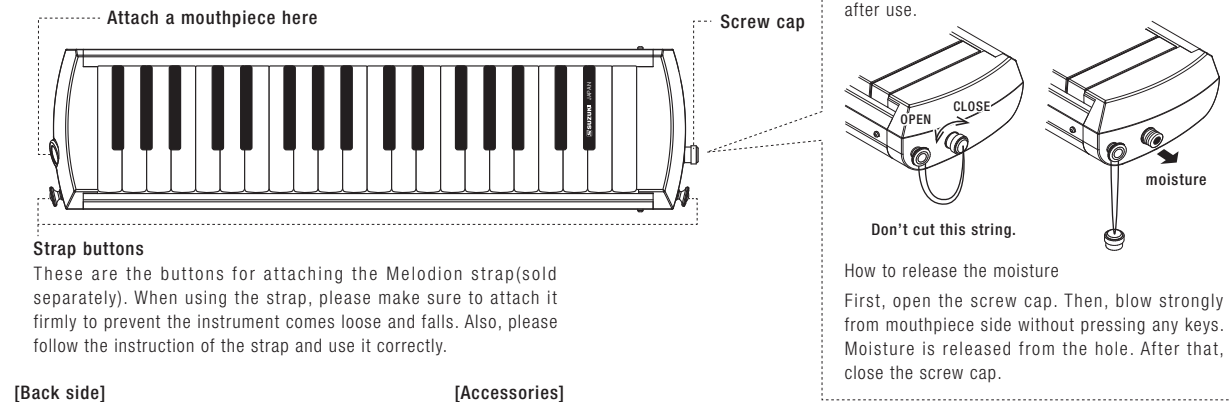

【Back side】

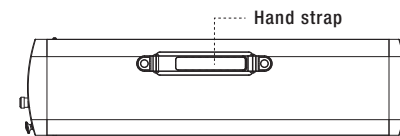

【Accessories】

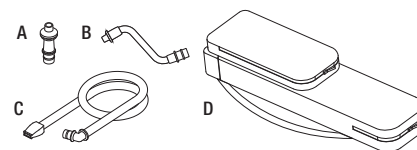

- A: Special short mouthpiece/MP-141
B: S shaped mouthpiece/MP-151
C: Mouthpiece with tube and L shaped joint/MP-171
D: Soft bag/MP-2006